1997-UP Ford Club Wagon
1995-UP Ford Crown Victoria
1997-UP Ford Econoline
2001-UP Ford Escape
2000-UP Ford Excursion
1995-01 Ford Explorer 2/4 DR
1999-04 Ford F-Series Super Duty Pickup
1995-UP Ford Ranger
1995-97 Lincoln Continental
1995-98 Lincoln Mark VIII
1995-99 Lincoln Town Car
1995-UP Mazda B-Series Pickup
1995-UP Mercury Grand Marquis
1996-UP Mercury Mountaineer

RADIO REMOVAL:

1. Insert DIN Removal Tools, spread the tools apart to release factory stereo, slip it out of the dash, unplug and remove radio.

1999-UP Ford Expedition
1999-UP Ford F-Series Pickup
1998-02 Lincoln Navigator

RADIO REMOVAL:

1. Carefully pry out on radio/dash bezel and unsnap to remove.

CAUTION: PASSENGER AIRBAG SWITCH DOES NOT UNPLUG ON PICKUP.

2. Insert DIN Removal Tools, spread the tools apart to release factory stereo, slip it out of the dash and remove radio.

SCOSCHE®

FD1423

IN-DASH INSTALLATION KIT FOR SELECT 1995-UP FORD VEHICLES

NOTE:
Rear support available separately. Rear supporting the radio adds to the installations structural integrity.

FORD

1997-UP	CLUB WAGON
1995-UP	CROWN VICTORIA
1997-UP	ECONOLINE
2001-UP	ESCAPE
2000-UP	EXCURSION
1999-UP	EXPEDITION
1995-01	EXPLORER 2/4 dr
1999-UP	F-SERIES PICKUP
1999-04	F-SERIES SUPER DUTY PICKUP
1995-UP	RANGER

LINCOLN

1995-97	CONTINENTAL
1998-02	NAVIGATOR
1995-98	MARK VIII
1995-99	TOWN CAR

MAZDA

1995-UP	B SERIES PICKUP

MERCURY

1995-UP	GRAND MARQUIS
1996-UP	MOUNTAINEER

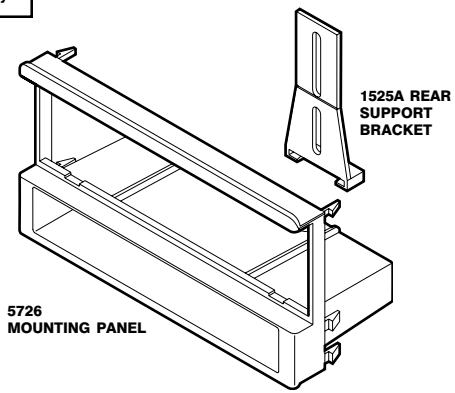

WIRE CODES

NOTE: For Factory WIring Codes go to: **www.scosche-cars.com**

INTRODUCTION

This premium installation kit is for 1995-UP select Ford vehicles. Included are all the parts you need to mount your car stereo/cassette or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION:
DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIR BAG WIRING - AIR BAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (FD1423) in Select 1995-UP Ford Vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/ inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call: **TECH HELP 1-800-621-3695 x3**

©2004 SCOSCHE INDUSTRIES, INC.

SI 11/04 - FD1423 (3000003)